



HYDRAULIC CONTROL PANEL

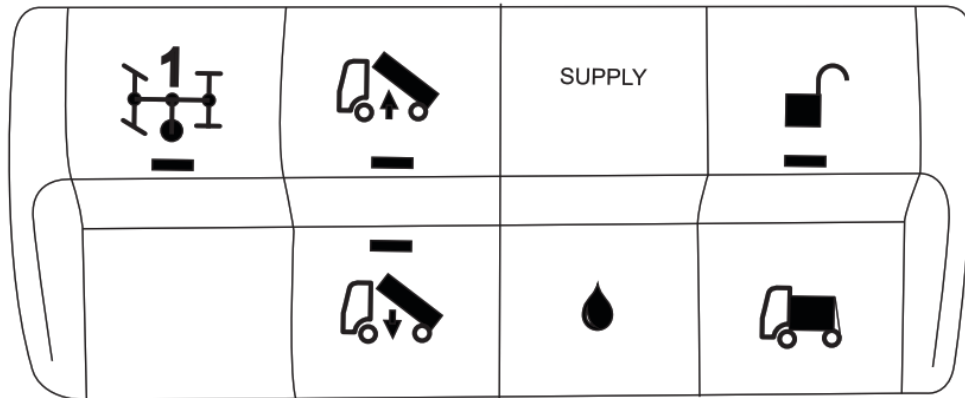

If you are unsure on how to operate, please contact
Melbourne Hydraulics 24/7 Nationwide Assistance on 03 9017 4698

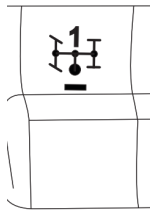


POWER TAKE OFF (PTO)

Switches the hydraulic pump on and off. Switch to be engaged in neutral (N1) and vehicle stationary.

Maximum engine speed 1300RPM


Maximum vehicle speed 10 km/h

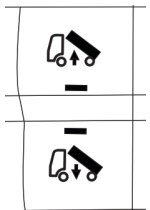

HOIST SWITCH

3 position switch. RAISE HOLD LOWER.


Operates hydraulics at a maximum pressure of 2000 psi

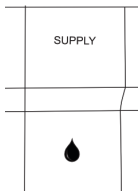

SUPPLY SWITCH

Switches hydraulic flow on continuously at a maximum pressure of 3100 psi.


2 position switch on/off.

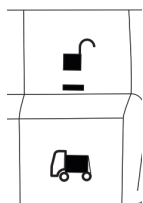


TAILGATE LOCK SWITCH

Switch operates the auxiliary airline primarily used for tail gates. This auxiliary airline can also be used for trailers that require a hose burst release airline.

SEMI TIPPER

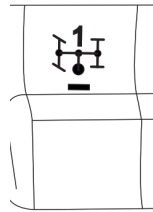


+

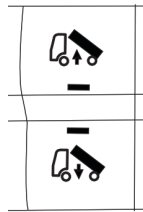


+

RPM
500 - 1300

WALKING FLOOR

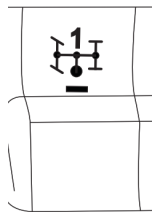


+

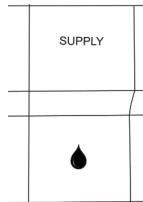


+

RPM
1000 - 1300

FLOAT / CAR CARRIER

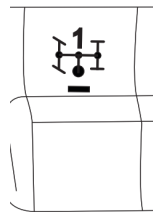


+

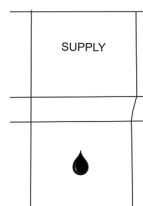


+

RPM
500

LIVE BOTTOM TRAILER

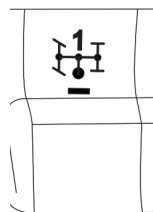


+

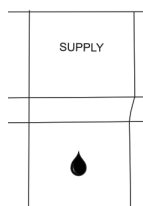


+

RPM
500 - 1300

TANKER

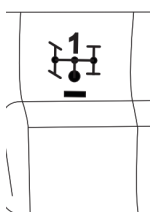


+

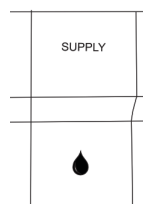


+

RPM
700

WINCH

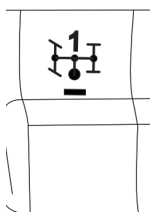

+

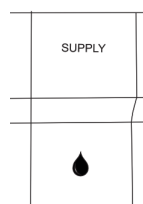

+

RPM
800 - 1000