



ENGINE SPEED ADJUSTMENT


ENSURE ALL WARNINGS ARE CLEAR FROM CLUSTER

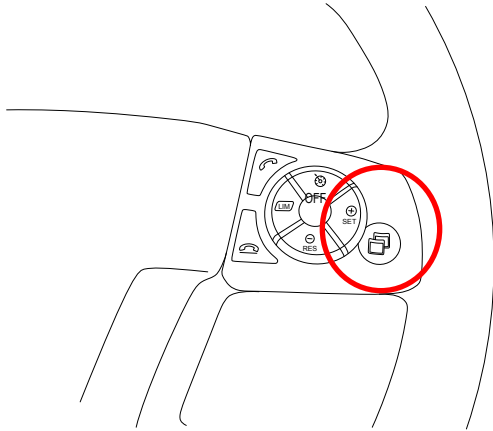


1. Locate menu button on right hand side of steering wheel

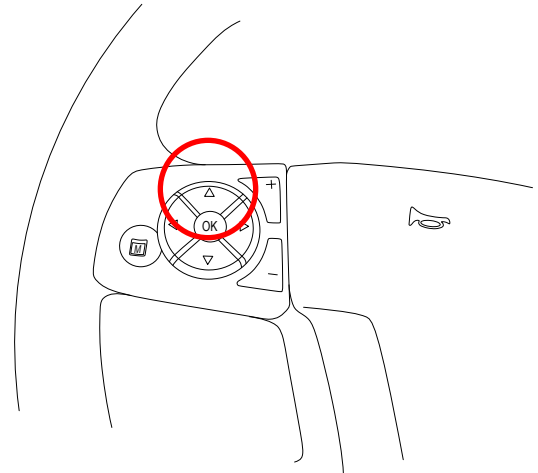


4. Locate up arrow on left hand side of steering wheel

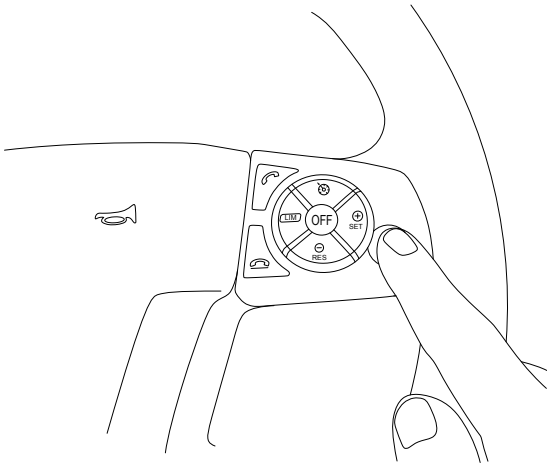


2. Press the menu button

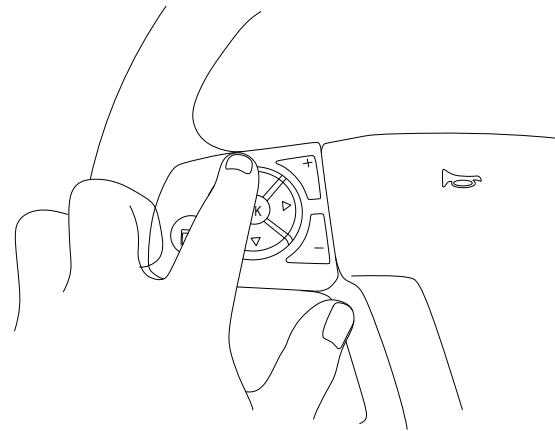

5. Press the up arrow to increase engine speed

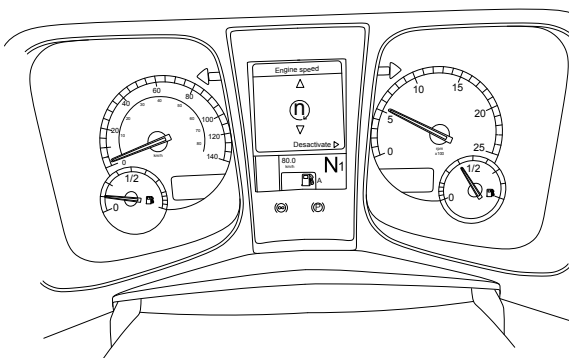

3. Engine speed will appear on the instrument cluster

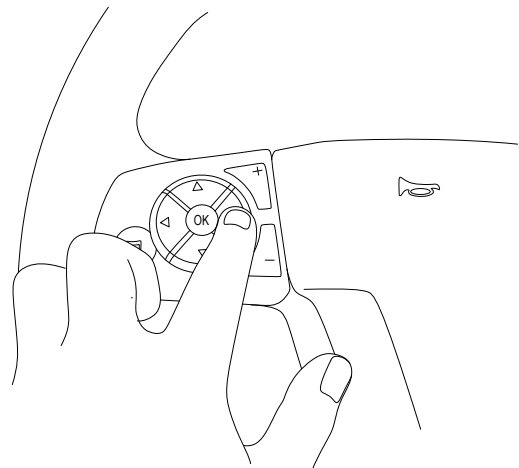

6. To deactivate the engine speed, follow steps 1 - 3 press the side arrow